



OBD II Diagnostic Scanner

User's Manual



This product designed and manufactured in Ottawa, Illinois USA by

B & B electronics
MANUFACTURING COMPANY

© 1998-2003 B&B Electronics Mfg. Co.

Table of Contents

About this guide.....	i
How this guide is organized	i
Conventions used in this guide	i
Safety	ii
Warranty	iii
Repair	iii
 B&B Electronics contact information	 iii
 Chapter 1: Product Introduction	 1
Welcome!	2
1.1 Package Contents	2
1.2 AutoTap [®] , My Car and My PC.....	3
 Chapter 2: Getting Started.....	 5
2.1 Installing the software.....	6
2.1.1 Installing AutoTap from the CD-ROM	6
2.1.2 Installing AutoTap from the web	9
2.2 Connecting the hardware	9
2.2.1 Connecting the cables to the hardware	9
2.2.2 Connecting to your PC and automobile	10
2.3 Software registration	11
2.3.1 First time installation	11
2.3.2 Using AutoTap for Windows.....	12
2.4 Saving/Opening your configuration	14
2.4.1 Saving your configuration.....	14
2.4.2 Opening your configuration	15
 Chapter 3: Setting up AutoTap to Display Data	 17
3.1 Parameter Table Window.....	18
3.1.1 Defining a table	18
3.1.2 Advanced features of a table	19
3.2 Gauge Window.....	21
3.2.1 Defining a gauge	21
3.2.2 Advanced features of a gauge	21
3.3 Graph Window.....	22
3.3.1 Defining a graph	22
3.3.2 Advanced features of a graph	23
3.4 Diagnostic Trouble Codes (DTC) window	24
3.4.1 Defining a DTC window.....	24

3.4.2	Clearing DTCs.....	25
3.4.3	Advanced features of the DTC window.....	25
3.4.4	AutoTap status bar.....	25
Chapter 4:	Data Logging With AutoTap	27
4.1	How to log data	28
4.2	How to review a log file	29
4.2.1	Playing a log file with its config file.....	29
4.3	How to export a log file	30
Chapter 5:	Troubleshooting	31
5.1	Helpful hints	32
AutoTap	Technical Specifications.....	35
Appendix	A1	
	Anatomy of Diagnostic Trouble Codes.....	A2
	OBDII Acronyms and Jargon	A4

About this guide

This user manual contains complete information for the use of the AutoTap® OBDII Diagnostic Scanner.

How this guide is organized

- * **Chapter 1: Product Introduction.** An introduction to product features and content.
- * **Chapter 2: Getting Started.** A guide to installing the software and making the connection.
- * **Chapter 3: Setting up AutoTap to Display Data.** See the data and various ways to view it with AutoTap.
- * **Chapter 4: Data Logging with AutoTap.** Capturing and reviewing your vehicle's data for analysis.
- * **Chapter 5: Troubleshooting.** Some answers to issues that you may run into and how to solve them.
- * **Appendix:** Explaining the codes and other industry jargon.

Conventions used in this guide

To make sure that you perform setup tasks properly, take note of the following symbols used throughout this manual.



WARNING! Important information to prevent injury.



CAUTION! Information to prevent damage to components.



IMPORTANT! Information that is critical to success of task.



NOTE! Tips and other helpful information.



WARNING:

DO NOT attempt to operate or observe a computer while driving!

Most readings can be obtained while stationary.

If data must be obtained while driving, have a passenger operate and watch the computer, or use the AutoTap's logging option for later review.



WARNING:

DO NOT turn your engine on indoors unless you have proper ventilation.

A running engine produces carbon monoxide; an odorless, colorless gas that can kill you.



WARNING:

Do not use the Radio Shack universal laptop power supply to power your laptop while using AutoTap.

This power supply will damage your AutoTap.

WARRANTY INFORMATION

All B&B Electronics products carry a one year limited warranty. Product warranty or service will not be extended if the product is modified or altered.

Returns: If, for any reason, you wish to return a hardware product purchased direct from us, you may return it via UPS or insured Parcel Post, undamaged, with the receipt, within 30 days of purchase, for a full refund, less shipping charges. Call, fax, e-mail or write to request a Return Material Authorization (RMA) number and routing instructions.

Packages returned without prior authorization will be refused. All products returned to B&B after 30 days may be charged a 20% restocking fee. Duties, taxes and customs charges are the buyer's responsibility.

Products purchased from resellers must be returned through the reseller.

REPAIR SERVICE: We offer a repair service for products that are out of warranty. Please call, fax, e-mail or write to request a Return Material Authorization (RMA) number. Duties, taxes and customs charges are the buyer's responsibility.

B&B Electronics - Contact Information

B&B Electronic Manufacturing Co.

Address: 707 Dayton Road
PO Box 1040
Ottawa, IL 61350

Telephone: (815) 433-5100
Fax: (815) 433-5105

Website: www.autotap.com (AutoTap)
www.bb-elec.com (B&B Electronics)
www.obdii.com (OBDII Information)

Email: support@autotap.com (Support)
orders@autotap.com (Sales)
dealerprograms@autotap.com (Resellers)

Chapter 1: Product Introduction



"Thanks again for the great product and please continue your good work. This has allowed me to stop guessing what's happening under the hood of my own car, and help a few others too."

"The best thing I bought in years is my AutoTap"

Ernie in Connecticut

Scott S. in Minnesota

"This has taken the place in my shop as the first scan tool I grab when I have a vehicle to check out and repair"

Bruce Bonebrake, professional technician and host of the DIY Network's Weekend Mechanic

Wayne in Oregon

"...an exceptional software package. It's like having 200+ gauges in one easy to use unit, combined with the ability to record any of them on the fly."

Welcome!

Thank you for buying an AutoTap® OBDII Diagnostic Scanner!

The AutoTap® OBDII Diagnostic Scanner, coupled with a personal computer, allows you to access your OBDII vehicle's computer modules. Vehicle data, which was once only available to dealership technicians using expensive factory scan tools, is now only a few mouse clicks away at your PC! AutoTap® is the prime choice for users ranging from the do it yourself beginner, to the professional service personnel.

- ~ Read Diagnostic Trouble Codes (DTCs)*
- ~ Reset "Check Engine" light trouble codes*
 - ~ View real-time vehicle operation data*
- ~ View data in list, graph, or gauge modes*
- ~ Record real-time vehicle operation data for future analysis*

The AutoTap® OBDII Diagnostic Scanner is the perfect scan tool whether you are simply diagnosing a problem, or analyzing and tuning your vehicle for maximum performance!

Package Contents

Check your AutoTap® package for the following items.

- ✓ AutoTap Hardware Converter Module
- ✓ OBDII Cable to Module – 4 ft
- ✓ DB9 Serial Cable to Module – 6 ft
- ✓ AutoTap CD
- ✓ Software Registration Certificate
- ✓ Quick Start Guide
- ✓ User Guide



NOTE: If any of the above items are damaged or missing, please contact B&B Electronics immediately.

AutoTap, My Car and My PC

The AutoTap® OBDII Diagnostic Scanner is designed to operate on USA-spec OBDII-equipped cars. This includes model year 1996 and newer cars, light trucks and SUV's. The software bundled with the AutoTap hardware is designed to run on any desktop or laptop PC equipped with one serial port and running Windows 95 or newer. Let us begin with a few basics to become familiar with the hardware/software compatibility between your car and PC.

How do I find out if my vehicle meets OBDII specifications?


Begin by looking under the hood for a sticker stating that the vehicle meets OBDII compliance specifications.



NOTE: All USA-spec vehicles manufactured in 1996 and later are OBDII compliant. However, 1997 and newer vehicles may not have the OBDII sticker under the hood.

OBDII vehicles have a 16-pin connector under the dash or in another location near the driver's seat. Sometimes, there is a plastic cover that is slightly larger than the AutoTap connector concealing the vehicle's OBDII port. This cover is usually labeled "OBDII." Remove this cover if your vehicle is equipped with it.

The 16-pin OBDII port pictured below is the connector that you will see and be attaching to the AutoTap Scanner shortly.



CAUTION: There are some 1994 and 1995 vehicles with this connector. Although the connector is the same as OBDII, most of these vehicles will have an OBD I compliance sticker under the hood and will **NOT** work with the AutoTap scanner. However, there are a few pre-'96 vehicles that will work with AutoTap. A list of these vehicles is available at www.obdii.com/connector.html.

Will my laptop or desktop PC work with AutoTap?

Typically, a PC that has a serial port and runs Windows 95 (or newer) will be enough to run AutoTap.

Here is a list of minimum PC hardware requirements:

- ✓ Pentium 233Mhz or better (or equivalent AMD processor)
- ✓ Windows 95, 98, NT, ME, 2000 or XP
- ✓ 50 MB of free hard drive space
- ✓ 32 MB RAM (64+ MB recommended)
- ✓ CD-Rom Drive (Only used for installation)
- ✓ 9-pin male RS-232 (Serial) Port (Please contact B&B Electronics for USB Port to Serial adapters)

Chapter 2: Getting Started




2.1 Installing the software



IMPORTANT: It is important that you understand the basic operation of the Windows operating system and have a basic understanding of your personal computer (PC). If you have questions about Windows or your computer hardware, please have the user guides that came with the computer available.

2.1.1 Installing AutoTap from the distribution CD-ROM


- 1) Make sure your computer is booted to Windows and that all your programs are closed. Open programs may cause the AutoTap software installation to fail.
- 2) Insert the AutoTap CD-ROM into the CD-ROM drive and close the drive. The Windows CD-ROM autorun feature will now begin installing the program.

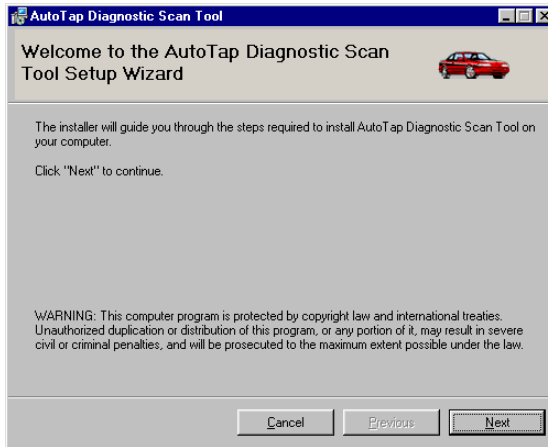


NOTE: If your computer does not start the installation program after you put the AutoTap CD into your CD-ROM, then your PC may not support the autorun feature and manual startup of the installation program is required. Please follow these steps to begin installation:

- 1) Use the mouse and click on “Start” in the lower left corner of your Windows screen.
 - 2) Move your mouse up from the “Start Menu” and click on “Run”
 - 3) In the “Run” dialog box, type “**D:\Setup**” and click on “OK” (If you are installing from a different CD-ROM drive, substitute the correct drive in place of the letter **D**)
-

- 3) Click on the “Next” button to begin installation of the software. This will bring you to the Destination Folder screen as seen below. The software will then prompt you to specify the directory in which the software will be installed. The default directory is listed and it is recommended that the default directory be used for most installations. If you need to change the installation location, then you will need to click on “Browse” at this time and make the necessary directory changes.

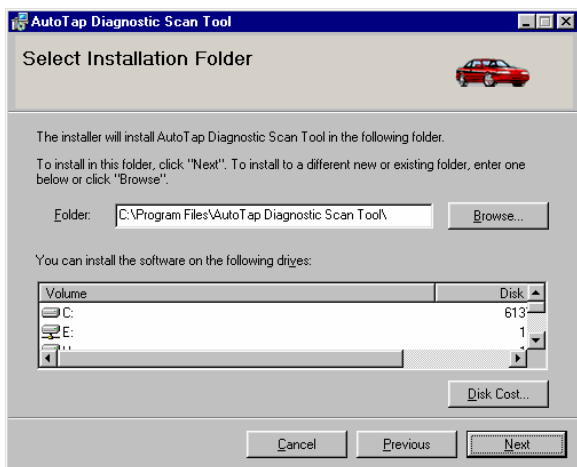

- 4) After you have selected your destination folder for the software installation, click on “Next.”
- 5) You will now be taken to a confirmation screen. At this point you can go back to the destination screen to make changes if needed. If no changes are needed click on “Next” to continue.
- 6) AutoTap software installation will now begin as seen below.

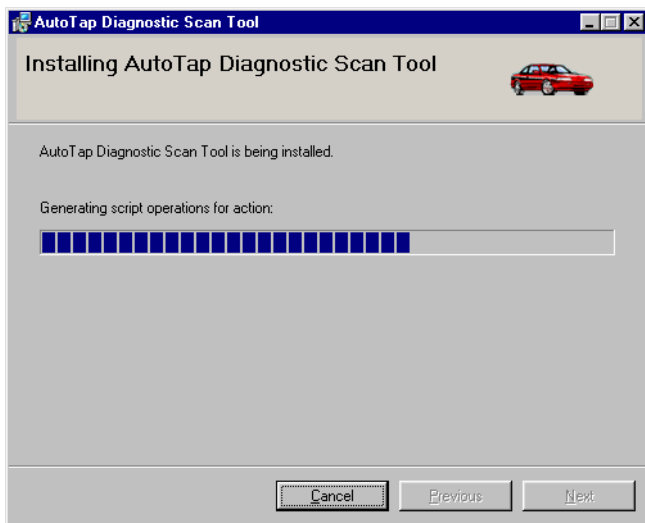

- 7) Once the file copy is complete, click on "Close" to complete the installation process. An "AutoTap Diagnostic Scan Tool" icon will be placed on your Windows Desktop. A program group will also be created in your Windows "Start" menu.



CONGRATULATIONS!
You have successfully installed
AutoTap on your PC!

2.1.2 Installing AutoTap from the Internet

- 1) Make sure your computer is booted to Windows and that all your programs are closed. Open programs may cause the AutoTap software installation to fail.
- 2) Log on to the Internet and open your Internet browser.
- 3) Type: www.autotap.com into the Address bar of your Internet browser.
- 4) Click on "Downloads."
- 5) Click on "Windows software" in the middle of the page. Here you will be presented with a variety of options. Please read the page carefully.
- 6) Once you have selected your download, you will want to save the download to a location on your hard drive, which you will be able to easily find.
- 7) Once the download is complete, run the downloaded file and refer to Section 2.1.1 of this manual for complete software install procedures.

2.2 Connecting the Hardware

The AutoTap® OBDII Diagnostic Scanner Hardware is designed to provide a link between the automobile's OBDII computer and your computer without using complicated cabling, bulky translation boxes or other hardware that may be inconvenient for regular use.



CAUTION: AutoTap Hardware as well as your personal computer (PC) is sensitive to static electricity. Do not touch any of the connector pins on the cables, module, or your PC as damage may result to the component.

2.2.1 Connecting the Cables to the AutoTap Hardware Module



NOTE: The cables are attached to the AutoTap module in the factory before shipping. If you disconnect your cables from the hardware module and must reattach them, follow the instructions below.

- 1) Plug the OBDII cable to the "VEHICLE" end of the converter module. (This is the large SAE J1962 connector – OBDII on one end and a 9-pin connector on the other end)
- 2) Plug the long PC cable into the "COMPUTER" end of the module. (This is the cable with two small 9-pin connectors.)

The AutoTap module is now ready for use.



NOTE: The PC cable (two small DB9 connectors) may be extended up to 50 feet by adding additional lengths of high quality cable. We recommend that you use B&B Electronics Model 9PAMF25 extension cable to add 25 feet to the cable. Should you require more than 50 feet total length, please contact B&B technical support.

2.2.2 Connecting the AutoTap Hardware to your PC and Automobile



- 1) With your personal computer (PC) turned off, connect the 9-pin serial cable of the AutoTap module to your PC. The serial port on your PC may be marked as “COM” or “RS-232” or have a modem symbol on it.

2)

IMPORTANT: Some personal computers do not have a serial port. If your PC does not have a serial port, you will need to use a serial port to USB port converter module. You will need to order part number UC232A for Windows 95, 98, Me, and 2000 computers, and Edgeport/1 for XP machines from B&B Electronics in order for the AutoTap hardware and software to work as designed.

- 3) Once the cable is connected to the PC, turn your computer on and let it boot into Windows. Now you are ready to connect the AutoTap OBDII hardware module to your automobile.
- 4) With the key turned to the ON position (engine does not have to be running), plug the OBDII cable end of the module into the automobile's 16-pin OBDII connector (refer to Section 1.2 of this manual to identify the connector).

The AutoTap hardware is now ready for software startup.

2.3 Software Registration

2.3.1 First time installation

- 1) Make sure your computer is booted to Windows and that all your programs are closed. (If your computer is not on, turn on and let it boot up.)
- 2) Ensure that the AutoTap hardware is connected to your vehicle as described in the previous section, and that your vehicle's key is in the "On" position.
- 3) Double click on the "AutoTap Diagnostic Scan Tool" icon on your Windows desktop screen.



- 4) The AutoTap software will search for the AutoTap hardware module and check for a valid software registration number. Since this is the first time you are running the software connected to the hardware, you will be prompted to enter the registration number before continuing.

Product Registration

To register this product call Customer Service at 815-433-5100 or enter the registration number supplied with the product.

Serial Number:

Registration Number:



IMPORTANT: Please locate the Software Registration Certificate supplied by B&B Electronics with the AutoTap product. If you cannot find this item, please contact B&B Electronics customer service.

- 5) Enter the product registration number and click on "Register". Your AutoTap is now registered. Save your registration information in case you need to re-install the software on this or another computer.


2.3.2 Using AutoTap for Windows Software

- 1) After you have successfully registered your software, AutoTap will attempt to retrieve your vehicle's VIN. If your vehicle supports automatic VIN retrieval, skip to #4 below
- 2) If AutoTap does not retrieve your vehicle's VIN, you will be prompted to enter it. It is important that you enter all 17 characters of the VIN, or AutoTap will not work properly. Click "Connect with VIN".
- 3) If you elect not to enter your VIN, you can select "Connect without VIN". AutoTap will connect to your vehicle and display OBDII generic parameters.



IMPORTANT: If you are registered for manufacturer's enhanced parameters, you must enter your VIN. Connecting without the VIN will only allow viewing of OBDII generic parameters.

- 4) Once AutoTap has retrieved your VIN, or you have entered it, AutoTap will check for Diagnostic Trouble Codes (DTC), which may be stored in the onboard control module. The software will then retrieve a list of all scan tool parameters supported by the vehicle. Note that this may take a few minutes, depending on your vehicle and the speed of your computer.

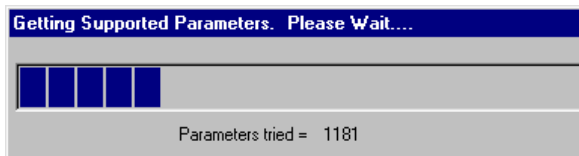

- 5) Once the parameter detection process is complete, you will be prompted with a popup dialog box stating, "To Begin, Select Display from Menu."
- 6) Click on "OK" to continue and you will be placed at a blank AutoTap screen with only a DTC list window box open.



NOTE: By default, the AutoTap software will check for DTCs each time the software starts. If you would like to disable this feature, click on "Options" from the toolbar and deselect "Read DTCs at startup".



NOTE: It is recommended that at this time you go to the File menu and select "Save Config As" in order to save the configuration file for the particular vehicle you are connected to. This way, you can bypass the parameter scan process the next time you connect to the vehicle. Save the file with a name that will easily identify the vehicle, i.e. 98 Chevy Malibu.



NOTE: The first time a vehicle is connected, AutoTap must complete a full parameter scan.

You are now connected and running the AutoTap software. You may continue on to configuring the AutoTap screen with data.



NOTE: AutoTap automatically loads the last-used config file if the VIN matches the connected vehicle. If the VINs don't match, you will be prompted to open a previously saved config, or scan the current vehicle for supported parameters.

2.4 Saving/Opening Your Configuration




NOTE: It is recommended that you save your configuration whenever you connect to a new vehicle for the first time or make a change to one of the configured windows in your current configuration. This will save you time in future sessions with the same vehicle, and will allow you to make configuration changes without being connected to the vehicle.

2.4.1 Saving Your Configuration

Saving your configuration is as simple as 1 – 2 – 3! You can save your vehicle configuration/information file at any time once AutoTap is running. Here is how:

- 1) Click on File at the top of the AutoTap screen.
- 2) Click on “Save Config File” in the drop down menu.

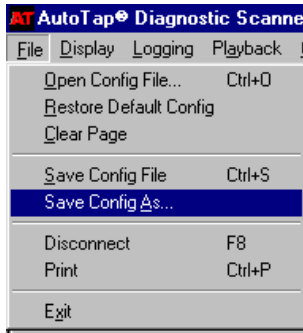

- 3) You will be prompted with a standard Windows “Save As” window. Type in the name you wish to use for the configuration file and click on “SAVE.”




NOTE: If you select “Save Config File”, you will overwrite the existing config file.

2.4.2 Opening Your Configuration


Opening your configuration file is also as simple as 1 – 2 – 3! You can open your configuration file while connected to the vehicle or simply working at your desk setting up configuration screens. Here is how:

- 1) Click on File at the top of the AutoTap screen.
- 2) Click on “Open Config File...” in the drop down menu.
- 3) You will be prompted with a standard Windows “Open” window. Click on the name of the configuration file you wish to open and then click on “Open.”

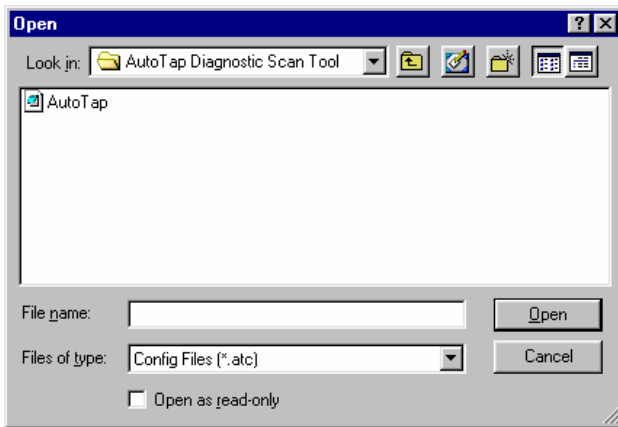

NOTE: There are buttons in the toolbar that contain the Save Configuration and Open Configuration functions. These are there to provide you with a quick means of performing these tasks. Move the mouse over the buttons to become familiar with what they are and they will save you time using drop down menus.

Chapter 3: Setting Up AutoTap to Display Data

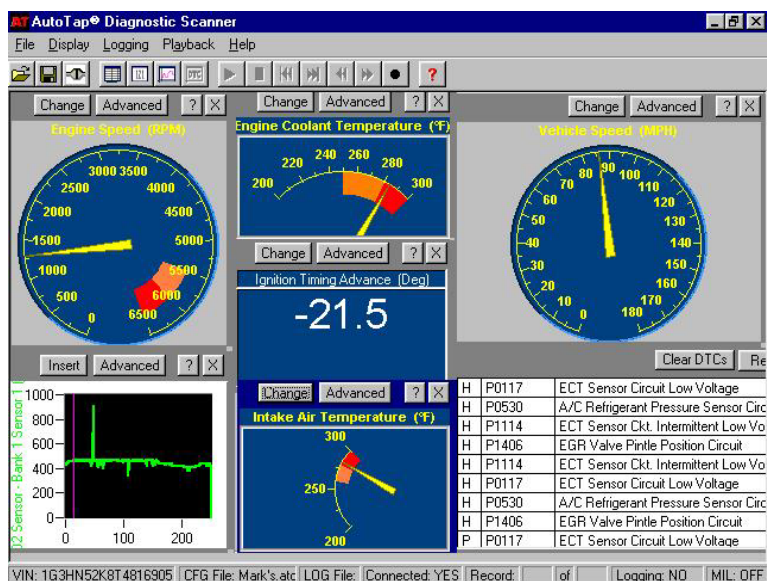

Parameter Table Window

The AutoTap® OBDII Diagnostic Scanner software can display diagnostic information in a variety of formats. This includes data tables, graphs and gauges. You can use the different display methods to fit your logging or viewing needs. For example, if you are logging data for future review, a data table display may be preferred. Or you can use the gauges to create a “virtual” dashboard. The flexibility of these formats allows for hundreds of combinations supplying you with maximum flexibility not only in diagnostics, but also in vehicle data acquisition for performance tuning.




IMPORTANT: It is natural to want to see all data available. However, the more data you view, the slower each parameter's value is refreshed. This is very important to remember as we cover viewing data, and especially logging. We recommend you display only the data related to the issue you're working on. This will maximize the update rate.

3.1.1 Defining a table

Defining a Table is as simple as 1 – 2 – 3! You can setup a few parameters in a Table and view data in no time. Here's how.


- 1) Click on Display at the top of the AutoTap screen, or right click anywhere on the screen.
- 2) Click on “Add Table”. A blank table will be displayed on the screen.
- 3) Click “Insert.” You will be presented with a “Category/Item” window in which you simply check the parameter(s) you want displayed in your table. Once you have selected your parameters, simply click on “OK.” This will insert your selected parameters into your table.

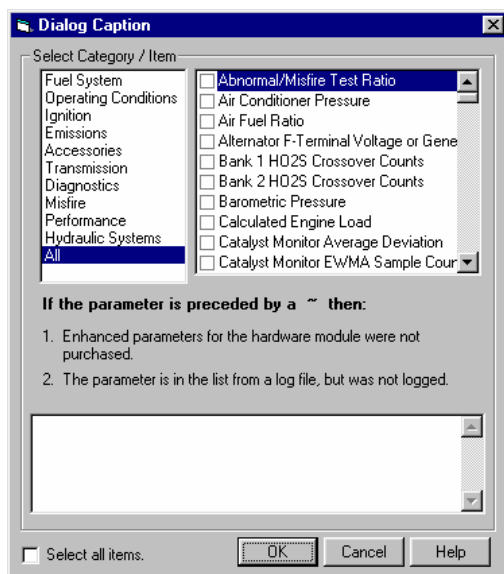

NOTE: If you want to select all of the available parameters, simply click on the “Select all items” box in the lower left-hand corner. We recommend that you save one config file with all parameters selected. Once you have this file saved, you can configure additional screens and make other configuration files without being connected to your vehicle.

3.1.2 Advanced features of a table

The “advanced” button gives you control over the “look and feel” of the table. From the “advanced” tab, you can change the color, size, and fonts used in the table. You can also set up alerts to have AutoTap notify you when a parameter’s data is above or below a value you supplied.

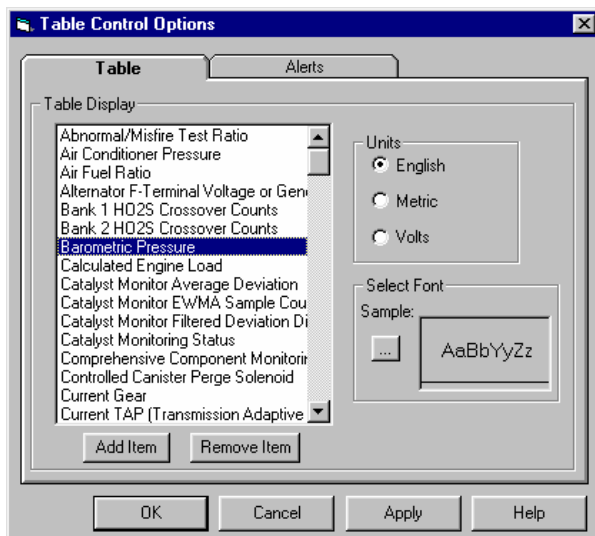

NOTE: For instant graphs and gauges, point your mouse at a parameter in your table and right-click on it. This will bring up a menu allowing you to instantly graph or setup a gauge for that item.



NOTE: Do not place the same parameter in more than one display at a time. In other words, if you have Engine Speed in a table, do not also place it in a graph or gauge.


3.2 Gauge Window

3.2.1 Defining a gauge

Defining a Gauge is as simple as 1 – 2 – 3! You can quickly setup a gauge and display data.


- 1) Click on Display at the top of the AutoTap screen, or right click anywhere on the screen.
- 2) Click on “Add Gauge”. A blank gauge will be displayed on the screen.
- 3) Click on “Change.” You will be presented with a “Category/Item” window in which you simply check the parameter you want displayed in your gauge. Once you have selected your parameter, click on “OK.”

Here is a picture of what your gauge may look like:

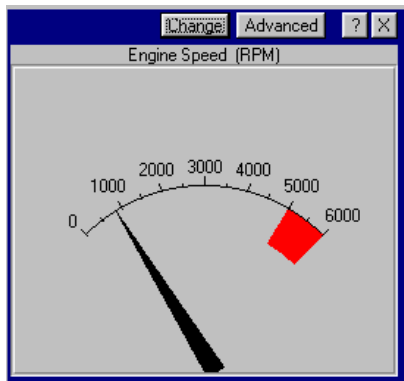

3.2.2 Advanced features of a gauge

The “advanced” button gives you control over the “look and feel” of the graph. From the “advanced” tab, you can change the color, size, and fonts used in the gauge. You can also set up alerts to have AutoTap notify you when a parameter’s data is above or below a value you supplied.

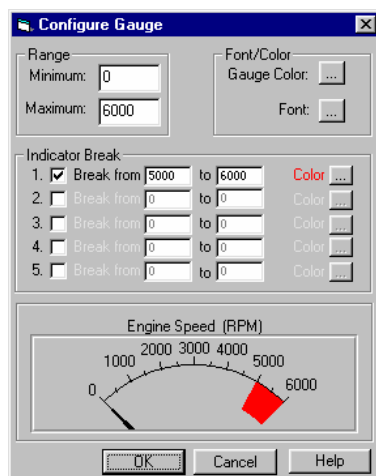


3.3 Graph Window

3.3.1 Defining a graph

You guessed it - defining a Graph is also as simple as 1 – 2 – 3!


- 1) Click on Display at the top of the AutoTap screen, or right click anywhere on the screen.
- 2) Click on “Add Graph”. A blank graph will be displayed on the screen.
- 3) Click “Insert.” You will be presented with a “Category/Item” window in which you simply check the parameter(s) you want displayed in your graph. Once you have selected your parameter(s), click on “OK.”

Here is a picture of what your graph may look like:

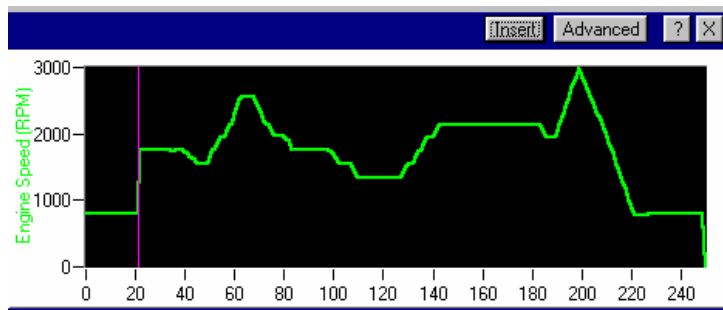

3.3.2 Advanced features of a graph

The “advanced” button gives you control over the “look and feel” of the graph. From the “advanced” tab, you can change the color, size, and fonts used in the graph. You can also set up alerts to have AutoTap notify you when a parameter’s data is above or below a value you supplied.

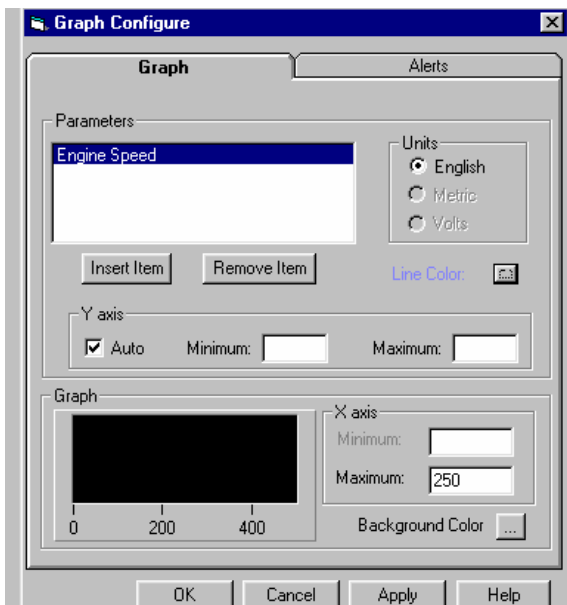


3.4 Diagnostic Trouble Codes (DTCs) Window

3.4.1 Defining a DTC window

When there's a problem with your car and your check engine light is on, the first thing you'll want to do is read the trouble codes. AutoTap makes it easy! AutoTap automatically checks for DTCs when you connect to your vehicle and start the software. AutoTap displays any trouble codes stored in the vehicle's computer as well as any pending DTCs that have not yet caused the MIL to illuminate.


If your vehicle has stored trouble codes, your DTC window would look similar to this:

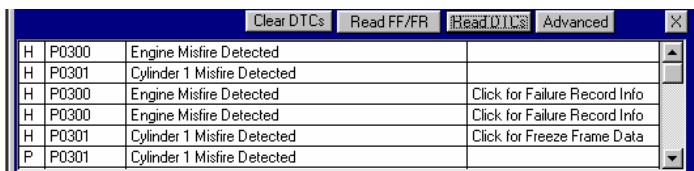

	Clear DTCs	Read FF/FR	Read DTCs	Advanced
H	P0300	Engine Misfire Detected		
H	P0301	Cylinder 1 Misfire Detected		
H	P0300	Engine Misfire Detected	Click for Failure Record Info	
H	P0300	Engine Misfire Detected	Click for Failure Record Info	
H	P0301	Cylinder 1 Misfire Detected	Click for Freeze Frame Data	
P	P0301	Cylinder 1 Misfire Detected		

In the example above, the vehicle has five "History" codes, identified with an "H" in the first column, and one pending code, identified with a "P".

The vehicle's computer stores freeze frame data at the time the DTC is set. When you "Click for Failure Record Info", you'll see the conditions that were present at the time your check engine light illuminated.

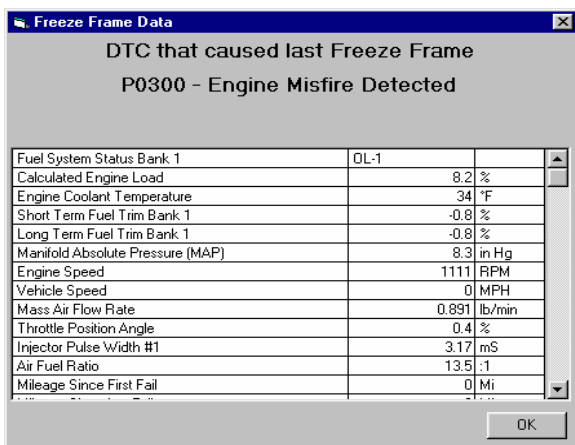

DTC that caused last Freeze Frame	
P0300 - Engine Misfire Detected	
Fuel System Status Bank 1	OL-1
Calculated Engine Load	8.2 %
Engine Coolant Temperature	34 °F
Short Term Fuel Trim Bank 1	-0.8 %
Long Term Fuel Trim Bank 1	-0.8 %
Manifold Absolute Pressure (MAP)	8.3 in Hg
Engine Speed	1111 RPM
Vehicle Speed	0 MPH
Mass Air Flow Rate	0.891 lb/min
Throttle Position Angle	0.4 %
Injector Pulse Width #1	3.17 mS
Air Fuel Ratio	13.5 :1
Mileage Since First Fail	0 Mi

3.4.2 Clearing DTCs

To clear the DTCs and turn off your MIL, simply click on the “Clear DTCs” button. Clearing the DTCs also clears the freeze frame data.

You can click the “Read DTCs” button at any time to check your vehicle for trouble codes.

If you’ve deleted the DTC table from the screen and need to add it manually, here’s how:


- 1) Click on Display at the top of the AutoTap screen, or right click anywhere on the screen.
- 2) Click on “Show DTC”. A DTC table will be displayed on the screen.

3.4.3 Advanced features of the DTC window

From the “advanced” tab, you have the ability to save your DTC and Freeze Frame data. You can also instruct AutoTap to check for DTCs, or the illumination of your MIL on a regular basis. These options are disabled by default. To enable them, remove the check mark in the appropriate box.

3.4.4 AutoTap status bar

At the bottom of the main AutoTap window, you will see a status bar that gives you information about the config and log files you’re using, as well as, whether you’re connected to the vehicle, and whether your MIL is on. If you’re playing back a log file, the status bar keeps track of what record of the log file is being displayed.

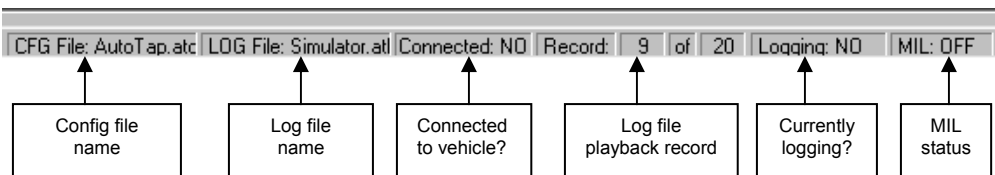

Chapter 4: Data Logging with AutoTap



4.1 How to log data

The AutoTap® OBDII Diagnostic Scanner not only displays real-time data, it also allows you to record and save data to be viewed at a later time. These log files can be exceptionally powerful tools for diagnosing intermittent problems and for performance monitoring.



IMPORTANT: It is natural to want to log all data available. However, the more data you log, the slower the response rate from the vehicle computer. Display only the parameters needed in order to maximize the vehicle computer's update rate. Only the parameters visible on the screen are logged.

One of the most powerful features of AutoTap is its simplicity in logging the vehicle's sensor data. Here is how:

- 1) When you are ready to log, simply depress the "Spacebar" on the keyboard! AutoTap will prompt you to name your log file.
- 2) Type in a name for your log file and click on "save". The background of the AutoTap screen will change to red indicating that logging is in progress.
- 3) When you want to stop logging, simply depress the "Spacebar" one more time and it will stop. The screen will return to normal color when logging is completed.

4.2 How to review a log file

You can review the data that you have logged in multiple ways. You can review it using the screens used to originally record the data, or you have the option to export it as discussed below in Section 4.3.



IMPORTANT: It is important that you have a configuration of your vehicle saved so that when you load a log file, you will be able to define the tables, graphs or gauges. If you do not have a saved configuration of your vehicle, connect to the vehicle and save a configuration file for it.

4.2.1 Playing a log file with its associated config file.

Not connected to vehicle:

- 1) Start the AutoTap software and select "Open a Log file for Playback" from the main screen.
- 2) Next, click on "File" and select "Open Config File". From the Open dialog box, select the config file you used when you recorded the log file. The screen will now look identical to when you recorded the log file.
- 3) Now, click on "Playback" at the top of the screen.
- 4) Click on "Play" to begin. You will notice that the file is now being replayed.

Connected to vehicle:

- 1) Click "Playback" on the toolbar and then select "Open File."
- 2) Select the file that you wish to playback.
- 3) Now, click on "Playback" at the top of the screen.
- 4) Click on "Play" to begin. You will notice that the file is now being replayed.



NOTE! If you would like to change the configuration of the screen for playback, add tables, graphs and/or gauges as described in section 3. When you click "Insert" to add parameters, the recorded parameters will be listed first, followed by the remainder of the parameters which are preceded by a "~". These parameters were not recorded and are not available for playback.

Make note of the VCR-like buttons on the toolbar at the top of the screen. These buttons will allow you to play, pause, stop, rewind, fast-forward, etc. Become familiar with these, and viewing your log files will be simple.

4.3 How to export logged data

AutoTap has the ability to export the data in your log file to a "Comma Delimited" (.csv) file. This format is easily opened with most popular database and spreadsheet software. This gives you the ability to perform in depth analysis of the data collected by AutoTap.

Here is how to export data once you have logged it with AutoTap:

- 1) Once you have your log file loaded into AutoTap, click on Logging at the top of the AutoTap screen.
- 2) Click on "Export to Comma Delimited File." At this point, a "Save As" window will open prompting you for a file name.
- 3) Type in a filename and click "Save." When the process is complete, the progress bar window will disappear.

Now you are ready to open the ".csv" file in your favorite database or spreadsheet application and begin your analysis of the data collected.


Chapter 5: Troubleshooting



5.1 Helpful Hints

Lost communications with the vehicle


If AutoTap loses communications with the vehicle it will display the following message:

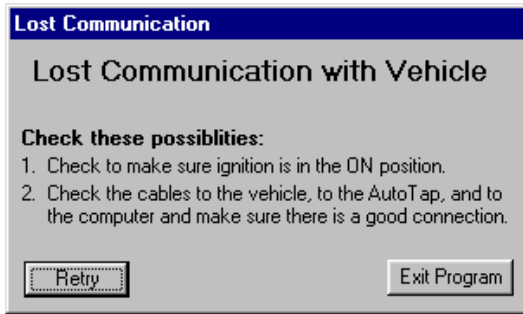

If a "Retry" fails, refer to Chapter 2 of this guide to make sure a critical step in the connection process was not omitted.

No communications with the vehicle on startup


In the event that AutoTap is not connected to a vehicle when the program is started, the window below will appear:

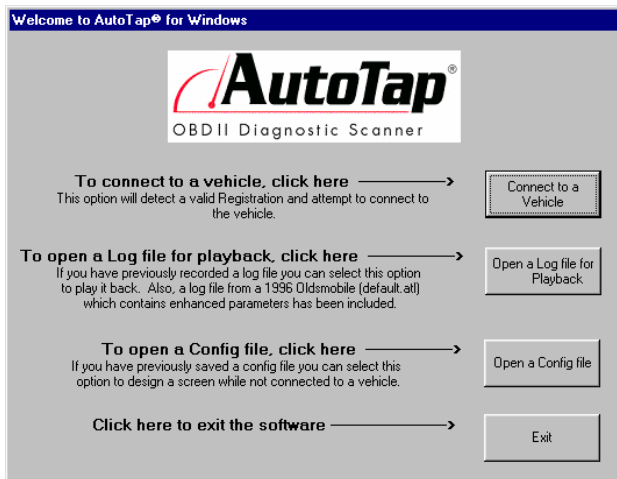

Ensure that all of the cable connections are good and the key is in the "On" position. Then select "Connect to Vehicle".

No AutoTap found

In the event that the window pictured below appears, the AutoTap software cannot communicate with the AutoTap hardware. The problem is most likely due to a faulty connection. Check the serial port connection to both the computer and the AutoTap. Also check the connection between AutoTap and the vehicle. If you are still getting this error after you checked the connection, check and make sure that your computer has the appropriate serial port defined in its hardware configuration.

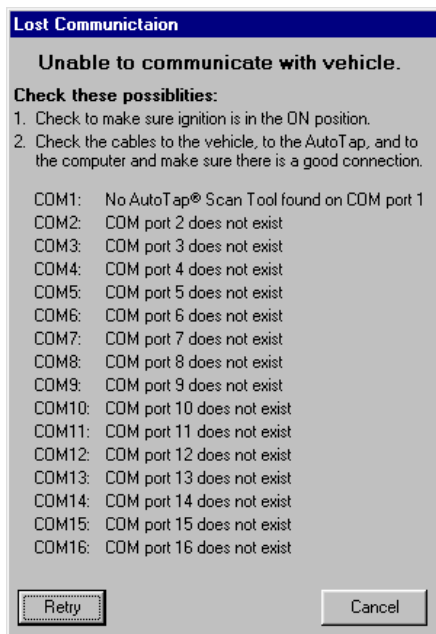

No power to the AutoTap hardware


The AutoTap hardware is powered from the vehicle's battery through pins 5 and 16 of the OBDII connector. If you have an AutoTap with an LED, the LED should illuminate when the OBDII cable is plugged into your vehicle. If the LED does not illuminate, you may have a blown fuse or another issue that affects power at the OBDII port.

Many vehicles use the same electrical circuit to provide power to the cigarette lighter and the OBDII port. If your cigarette lighter is working but your AutoTap's LED does not illuminate, or if you have an AutoTap without an LED, check for 12 volts DC between pins 5 and 16 on the OBDII connector with a volt meter. If there are 12 volts at the OBDII connector, call AutoTap tech support at 815-433-5100 for further assistance.

HotSync conflict

If you are a Palm® PDA user, your computer may load Palm's HotSync® manager each time the computer starts up. You'll know

HotSync is running if the HotSync icon  is in your systems tray in the lower right hand corner of your computer screen. When HotSync is running, it captures the serial port making it unavailable to AutoTap as seen in the picture below:

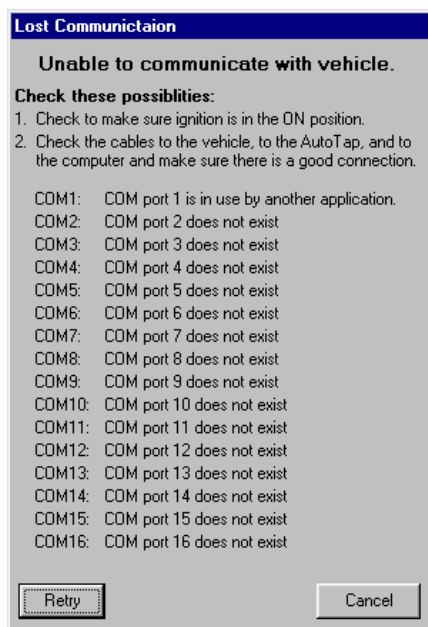

When you're using AutoTap, disable, or close the HotSync manager, or any other program that captures your PC's serial port.

AutoTap[®] Technical Specifications


Supported OBDII protocols:	J1850 VPW, J1850 PWM, ISO9141, ISO14230
Output:	RS-232 serial signal
Car to converter cable:	4', custom molded J1962 male connector to DB-9 female, included
Converter to PC cable:	6', DB-9 female to DB-9 male, included. May be extended up to 50' with standard PC cable
Software media:	CD-Rom
Dimensions:	4" long x 1.75" wide x .875" thick, plus cables
Warranty:	One-Year Replacement. (See Warranty Information for Details)

AutoTap Appendix



Anatomy of the Diagnostic Trouble Code

A DTC is made up of 5 digits. The figure below demonstrates the composition of a DTC. With this information it is easier to trouble shoot a DTC without knowing the description of the code.

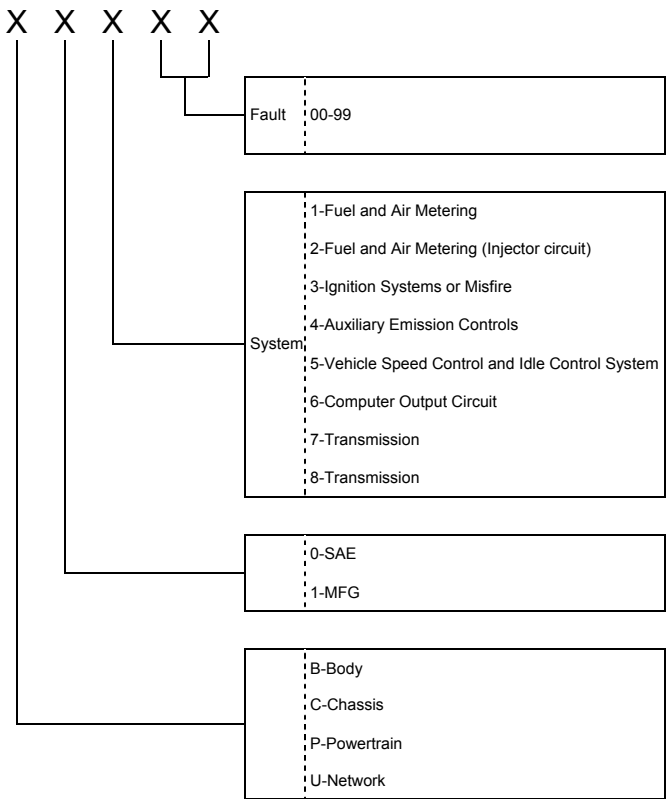

Types of DTC's

There are two categories of DTC's that apply to OBDII. They are listed below with Type A being the more severe

Type A

1. Emissions related.
2. Requests illumination of the MIL after one failed driving cycle.
3. Stores a freeze frame DTC after one failed driving cycle.

Type B

1. Emissions related.
2. Sets a Pending Trouble Code after one failed driving cycle.
3. Clears a Pending Trouble Code after one successful driving cycle.
4. Turns on the MIL after two consecutive failed driving cycles.
5. Stores a freeze frame after two consecutive failed driving cycles.

A list of common OBDII Diagnostic Trouble Codes can be found on our website, www.autotap.com.

OBDII Acronyms and Jargon

OBDII is thick with acronyms; jargon, shorthand and code phrases sometimes seeming to serve to keep the rest of us at bay. Here is a start on untangling these codes.

AFC - Air Flow Control

ALDL - Assembly Line Diagnostic Link. Former name for GM (only) Data Link Connector, the connector socket into which the scan tool plug is inserted; sometimes used to refer to any pre-OBDII computer signals

CAN - Controller Area Network

CARB - California Air Resources Board

CFI - Cross Fire (Fuel) Injection

CO - Carbon Monoxide

DLC - Data Link Connector

Driving Cycle - A specific sequence of start-up, warm-up and driving tasks that tests all OBDII functions.

DTC - An acronym for Diagnostic Trouble Code. It is also referred to as a fault code, code or history trouble code. Any code stored in the PCM memory

ECM - Engine Control Module- usually the main in-car computer controlling emissions and engine operation

EEC - Electronic Engine Control

EEPROM or **E2PROM** - Electrically Erasable Programmable Read Only Memory

EFI - Electronic Fuel Injection

EGR - Exhaust Gas Recirculation

EMR - Electronic Module Retard

Enhanced readings - Parameters shown by on-board computers, which are not required by OBDII, but included by manufacturers to assist in trouble-shooting specific vehicles. Also- Proprietary Readings

EPA - Environmental Protection Agency. Federal agency. Office of Mobile Sources is the branch concerned with auto emissions.

ESC - Electronic Spark Control

EST - Electronic Spark Timing

Fuel Trim - Engine computer function that keeps the air/fuel mixture as close to the ideal 14.7:1 stoichiometric ratio as possible

HC - Hydrocarbons

HEI - High Energy Ignition

HO2S - Heated Oxygen Sensor

ISO 9141 - International Standards Organization OBDII communication mode, used by Chrysler and most foreign cars. One of five hardware layers defined by OBDII

ISO14230 – Also known as Keyword Protocol 2000, or KWP 2000. SAE-established OBDII communication standard used by some import cars. One of five hardware layers defined by OBDII

J1850PWM - (Pulse Width Modulated) SAE-established OBDII communication standard used by Ford domestic cars and light trucks. One of five hardware layers defined by OBDII

J1850VPW - (Variable Pulse Width Modulated) SAE-established OBDII communication standard used by GM cars and light trucks. One of five hardware layers defined by OBDII

J1962 - SAE-established standard for the connector plug layout used for all OBDII scan tools

J1978 - SAE-established standard for OBDII scan tools

J1979 - SAE-established standard for diagnostic test modes

J2012 - SAE-established standard accepted by EPA as the standard test report language for emission tests

MAF - Mass Air Flow

MAP - Manifold Absolute Pressure

MAT - Manifold Air Temperature

MIL - An acronym for Malfunction Indicator Lamp. The MIL was formerly called the "service engine soon" or "check engine" lamp on your dash.

NOx - Oxides of Nitrogen

O2 - Oxygen

OBD - On-Board Diagnostics

OBDI - An acronym for On-Board Diagnostics Generation One. An on-board automotive diagnostic system required by the California Air Resources Board since 1988, which uses a microprocessor and sensors to monitor and control various engine drivability functions.

OBDII or OBD II - An acronym for On-Board Diagnostics Generation Two. OBDII expands upon OBD I to include emissions system and sensor deterioration monitoring. Updated On-Board Diagnostics standard effective in cars sold in the US after 1-1-96

Parameters - Readings on scan tools representing functions measured by OBDII and proprietary readings

PCM - Powertrain Control Module, the on-board computer that controls engine and drive train

PCV - Positive Crankcase Ventilation

Proprietary Readings - Parameters shown by on-board computers, which are not required by OBDII, but included by manufacturer to assist in trouble-shooting specific vehicles. Also- Enhanced readings

PTC - Pending Trouble Code

RPM - Revolutions Per Minute

SAE - Society of Automotive Engineers, professional organization that set the standards that EPA adopted for OBDI and OBDII

Scan Tool - Computer based read-out equipment to display OBDII parameters

SES - Service Engine Soon dash light, now referred to as MIL

SFI - Sequential Fuel Injection

Stoichiometric (Stoy'-kee-o-metric) **Ratio** - Theoretical perfect combustion ratio of 1 part gas to 14.7 parts air

TBI - Throttle Body Injection

TPI - Tuned Port Injection

TPS - Throttle Position Sensor

VAC - Vacuum

VCM - Vehicle Control Module, the in-car computer that oversees engine management, transmission operation, anti-lock brakes, and other functions not directly related to emissions control

VIN - Vehicle Identification Number (Yes, VIN Number is redundant, but that's what everyone says.)

VSS - Vehicle Speed Sensor

WOT - Wide Open Throttle. Today's "politically correct" version of WFO.